

Container Door Lock Fitting Instructions AB

IMPORTANT

Your Bulldog product is supplied with two keys. Replacements can not be obtained without quoting the 10 digit key number which is printed on the self adhesive label attached to the keys. Peel and attach the label in the space provided below and keep these instructions in a safe place.

Alternatively you can register your key number with the Bulldog key safe service (fees apply). Simply visit www.bulldogsecure.com and choose to register your product.

Please note the keys are a patented design and only available from Bulldog. Visit www.bulldogsecure.com to order additional keys.

Key No.

Peel and attach label here

Note Hole provided for security seal.



The Bulldog container lock is intended for fitting to the rear door bars of containers. Max bar diameter 38mm distance to the outside of bars 230mm up to 460mm.

A minimum clearance of 6mm is required between the container door and rear of the door bars.

<u>Fitting</u>

- 1. To separate the two halves of the lock insert the key and turn it three quarters of a turn clockwise. Pull on the key to withdraw the lock and separate the two halves. Whilst the lock is withdrawn remove the key.
- 2. To attach the lock to the trailer doors, slide the short hook around the left hand bar.
- 3. Slide the long hook around the right hand bar and into the slot of the short hook.
- 4. Press the lock into the nearest available hole.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH. Tel: 01952 728171

Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock lubricate it every four months with 3 in 1 oil or a silicon based oil/ lubricant.