

GA90 Garage/Roller Shutter Door Lock Fitting Instruction

Please Note: To install the lock you will need suitable foundation bolts. These are available from builders merchants or DIY stores.

The lock is supplied without them as there are many types available and people have different requirements.

WARNING:

For maximum security, you are advised to site the locking device on a concrete or tarmacadam site - 'NOT ON LOOSE GROUND'. Take care to check for buried cables or pipes.

1. The optimum position for the bracket is at the midpoint at the bottom of the door with the bracket positioned as low as possible.
2. Mark the position of the two holes.
3. Centre punch the hole centres and drill clearance holes through the door for the fixing bolts.
4. Using the coach bolts, secure the angle bracket with the nuts and washers provided.
5. Use the Bulldog Super Lock Bolt to mark the area in which the ground socket is to be attached.
6. Position the ground socket and mark the holes to be drilled.
7. Drill the holes with a suitable drill bit and relieve the area in the centre where the lock locates.
8. Reposition the ground socket and check that the holes are in alignment, when the lock bolt is inserted.
9. Insert the foundation bolts and tighten.



Note: A dust cap is provided to prevent the ingress of dirt into the lock and should be used at all times.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.
Tel: 01952 728171 Email sales@bulldogsecure.com
www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism and ball bearings with WD40 (or equivalent) minimum every four months.