

LC60 Slave Pivot Plate Fitting Instructions.



1. Dismantle stabiliser and remove the damper pivot plate.
2. Insert the new damper pivot plate and re-assemble stabiliser. (It may be a good opportunity to clean all the friction damper parts).
3. Fit your new Bulldog car bracket to the fitting instructions in the box.
4. Insert the damper pivot bracket into the slot in the car bracket and secure with new locking stud.
5. Check the tension at the end of the spring arm to the manufacturers instructions. Using a spring balance or bathroom scales. **DO NOT** use a torque wrench on the centre nut and bolt.

Bulldog Security Products Limited.

Units 2,3,4 Stretton Road , Much Wenlock, Shropshire, TF13 6DH. Tel: 01952 728171 Fax: 01952 728117

Email: sales@bulldog-security-products.co.uk

ST75-1

LC60 Slave Pivot Plate Fitting Instructions.



1. Dismantle stabiliser and remove the damper pivot plate.
2. Insert the new damper pivot plate and re-assemble stabiliser. (It may be a good opportunity to clean all the friction damper parts).
3. Fit your new Bulldog car bracket to the fitting instructions in the box.
4. Insert the damper pivot bracket into the slot in the car bracket and secure with new locking stud.
5. Check the tension at the end of the spring arm to the manufacturers instructions. Using a spring balance or bathroom scales. **DO NOT** use a torque wrench on the centre nut and bolt.

Bulldog Security Products Limited.

Units 2,3,4 Stretton Road , Much Wenlock, Shropshire, TF13 6DH. Tel: 01952 728171 Fax: 01952 728117

Email: sales@bulldog-security-products.co.uk

ST75-1