

Please note: For Part No WL15 where no lock or locking plate is included, please follow steps 1 to 6. Note lock and locking plate can be added if required. For part No WL10 which includes the lock and plate, please follow steps 1-10.

Warning:

When removing the caravan wheels, it must be done so in accordance with the manufacturers instructions. Under no circumstances should any person go under the caravan or enter it whilst it is jacked up. Do not use the corner steadies to jack the caravan.

1. It is recommended that all work is carried out on a hard and level surface.
2. If fitting WL10 winter wheels that includes a locking plate, insert the key into the lock and turn a ¼ turn anti-clockwise remove the lock and lift the cover from the upright.
3. Ensure the handbrake is applied and that the opposite wheel to the one that is to be removed is chocked both sides. Slacken off the wheel bolts, but do not remove.
4. Using a suitable jack, raise the caravan in accordance to the manufacturers instructions, once the wheel is clear of the ground, lower the corner steadies to touch the ground only as a safety measure to stabilise the caravan.
5. Remove the wheel and align the appropriate set of holes in the winter wheels, attach it to the hub using the wheel bolts. Tighten the bolts to the manufacturers recommended setting.
6. Raise the corner steadies and lower the caravan ensuring where the winter wheels come into contact with the ground it is suitable for the application, and that the base of the winter wheel is horizontal.
7. Place the cover plate over the winter wheels so that the lip hooks into the upright and the lock aperture is in line with the lock lug.
8. With the lock in the open position, insert it through the cover and turn the key a ¼ turn clockwise to lock. Remove the key.
9. Repeat steps 1-6 for the opposing wheel, ensuring that the wheel is lifted to the minimum height in order to remove it.
10. With both winter wheels in place, lower the corner steadies so they are in contact with the ground.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171

Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.