



This post is intended for use with the Bulldog Minilock.

WARNING:

1. For maximum security you are advised to site the post on a concrete or tarmacadam site - 'NOT ON LOOSE GROUND'.

Fitting

1. Excavate the site to allow the Lock Post to protrude above ground, (H) sufficient to ensure that the caravan is level when hitched up to the post ball.
2. Concrete post in while ensuring that it remains in a true vertical position with the aid of a spirit level.
3. When the concrete is set, hitch up your caravan or trailer to the post and lock on your Bulldog Minilock.

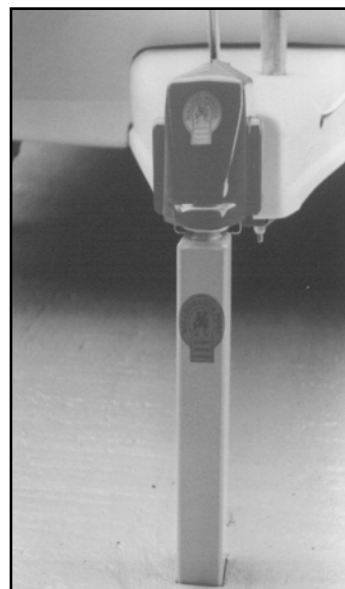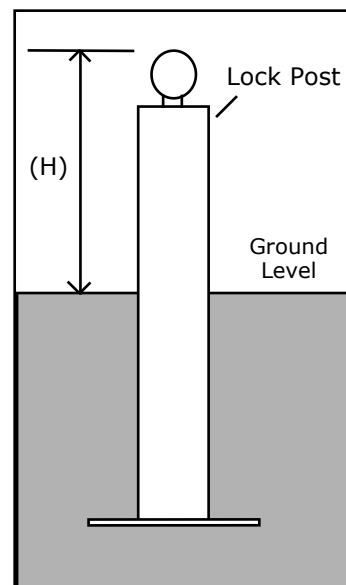

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171

Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.