


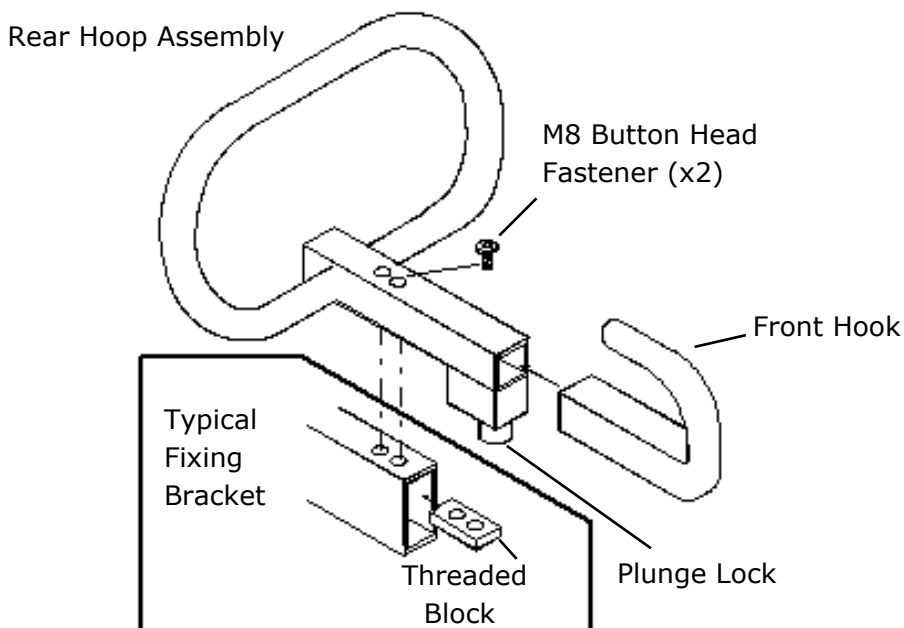

1. Choose relevant fixing bracket and install. (See separate instructions).
2. Attach rear hoop assembly to fixing bracket using M8 button head fasteners and tighten into threaded block inside rectangular hollow section or threaded holes in the case of Standard Wall Bracket, with allen key provided.

TIP:-

To make insertion of fasteners easier use a small amount of Blu-Tack or equivalent on button head to hold it onto allen key whilst starting thread.

3. Tap in black plastic inserts into end of hollow section where necessary.
4. With front hook removed, place saddle into rear hoop assembly, and then fit front hook. The keys are not required to lock the plunge lock, simply push lock into best fitting hole until lock 'clicks'.
5. To remove Saddle Stop®, insert key, rotate 1/2 turn, pull on key until lock pops out.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171

Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.

SS1-1 K Registered Design No. 2072127. European Design Registration applied for No's. 74279-00, M98028723,81852.